



## TRIMBLE RECEIVERS

# TRIMBLE OEM GNSS

Version 4.11  
Revision A  
December 2019

This document contains late-breaking product information, updates, and troubleshooting tips not covered in the Trimble® GNSS OEM receivers' documentation:

- ▶ Introduction
- ▶ New Features and changes
- ▶ Upgrade Procedure and Documentation

## INTRODUCTION

This release note describes the improvements made since version 3.85 to the following Trimble GNSS OEM receiver:

- ▶ MB-Two
- ▶ ABX-Two

With this release, users can upgrade to version 4.11 of the firmware for the latest features.

## NEW FEATURES

**Connected Device Security:** The new option[s] IOT-SECURITY is now supported by the receiver. All receiver shipped after January 1st 2020 will have option [s] installed. For more information, please review the [California Connected Device Product Bulletin](#). When the new option[s] is installed, the following changes are applied:

- ▶ Web UI: the default password is the serial number and it must be changed the first time you connect the Web UI
- ▶ Web UI: when creating a new password, the strength of the password is now display and the strength must be at least medium to be accepted
- ▶ Web UI: the only way to reset the Web UI password is to perform a reset to factory settings (command \$PASHS,INI,8)
- ▶ TCP/IP: the default password for the TCP/IP is empty. It must be defined before enabling the security on these ports
- ▶ TCP/IP: the port I and J does not accept any commands if the Web UI password has not been modified
- ▶ FTP: the FTP password is empty by default and it must be created before enabling the FTP server
- ▶ NTRIP Caster: the password for the NTRIP caster is empty by default and it must be created before enabling the caster.



## IMPROVEMENTS

**RTX:** The new beam RTXMX for Mexico is now supported.

**IBSS/NTRIP:** The NTRIP login can contain now 64 characters (it was 32 in previous versions).

**Rover Mode:** In the Web UI banner, field Rover Mode, RTX is now displayed in addition to RTK or heading if the RTX mode is enabled.

## RESOLVED ISSUES (SINCE VERSION 3.85)

**FTP Push:** There was a conflict between the manual FTP push and the automatic FTP push in the sessions. This problem is now resolved.

**RTK Option:** When the RTK option (option [J]) was installed followed by a firmware upgrade, the receiver did not compute RTK till a reset of the receiver.

## UPGRADE PROCEDURE AND DOCUMENTATIONS

Version 4.11 of the firmware (Trimble MB-Two Upgrade V4.11) can be downloaded from the Trimble Support web page. Go to <https://www.trimble.com/Precision-GNSS/Index.aspx> and select the applicable product.

There are two ways to load the new firmware:

- ▶ Use the Ashcom application
- ▶ Use the web interface of the receiver

For more information, please refer to the Firmware Upgrade section in the MB-Two User Manual or ABX-Two User Manual.



### Legal Notices

Trimble Inc.  
Integrated Technologies  
10368 Westmoor Drive  
Westminster, Colorado 80021 USA  
[www.trimble.com/Precision-GNSS](http://www.trimble.com/Precision-GNSS)

#### Copyright and Trademarks

©2019, Trimble Inc. All rights reserved.

Trimble and the Globe & Triangle logo are trademarks of Trimble Inc., registered in the United States and in other countries. All other trademarks are the property of their respective owners.

#### Release Notice

This is the May 2019 release (Revision A) of the GNSS OEM Receivers' Release Notes. It applies to version 4.11 of the Trimble OEM GNSS Series receivers.